
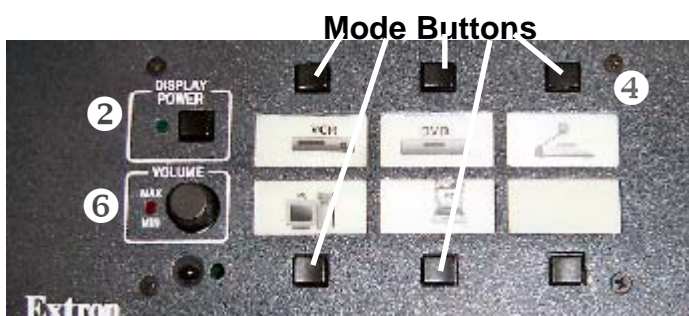


Room E417

# High Tech Classroom

by Dennis Mack, Audio Visual Technician

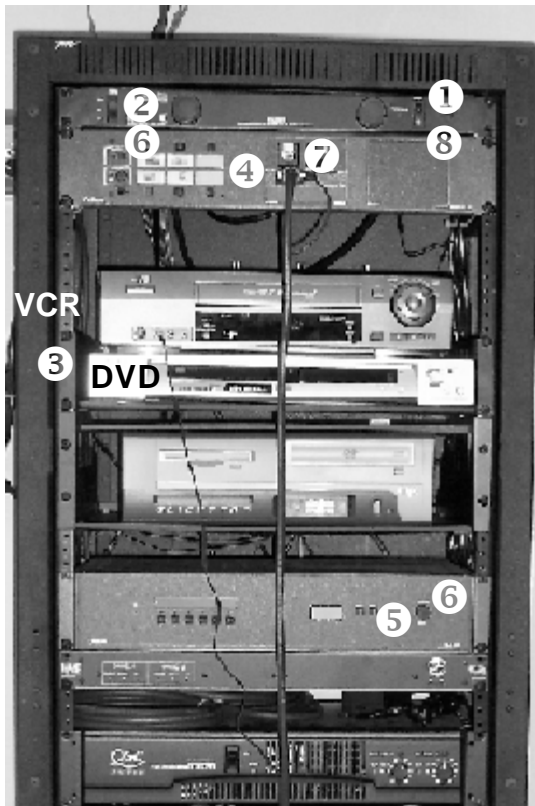

- 1 Power up: Turn on the Main Power Switch.
- 2 Press the Display Power Switch.
- 3 Turn on the VCR, DVD or computer.
- 4 Select the Mode: VCR, DVD, PC or Laptop
- 5 The audio amplifier must be ON.
- 6 Adjust the Volume.
- 7 Connect your laptop computer.
- 8 Power down:
  - a. Turn off peripheral equipment
  - b. Press the display power switch to turn off the projector.
  - c. Turn off the main power switch.

## Practice!

We recommended a practice session with the Digital Presenter to become familiar with it before using it in class. It may be controlled using the Remote Control unit or the buttons on the front and right side of the unit.

