

Room E419

High Tech Classroom

by Dennis Mack, Audio Visual Technician



Troubleshooting Tips

1. If no video is showing on the screen, be sure the **DVD/VCR** is **turned on**.
2. If there is still no video showing, be sure the **correct input (DVD/VCR)** has been selected.
3. If there is no audio, check the Volume Control and adjust as necessary.



1. Press the ON button to turn on the projector.
2. Turn on the equipment you wish to use (Computer, Laptop, DVD/VHS Combo or Elmo Presenter).
3. Choose the correct Input button.
4. If your computer image does not fit on the screen, press the Auto Image button.
5. You may turn the projected image off and on by pressing the Display Mute and Display Unmute buttons.
6. Turn the projector off by pressing the Off button.
7. Be sure to turn off the computer.

